



7" Change Tray 70-CT

Operation Manual



Version 1.0

CONTENTS

1. Safety Instructions.....	3
2. Connections and Installation.....	3
3. Accessories.....	4
4. Specifications	5
5. Troubleshooting.....	6

1.Safety Instructions

These safety instructions must be followed to ensure your safety and prevent property damage.

Warning/Cautions otherwise, it may result in personal injury or property damage.

Make sure to read the instructions carefully and use the product in the correct manner.

1. Power adapter:

INPUT:100V-220VAC

0.5A 47-63Hz

OUTPUT:12V 1.25A

2. Do not place 70-CT in a location exposed to moisture, dust, smoke, water, or in a car.

Otherwise, this may result in electric shock or fire.

3. Clean the product using a soft cloth with a monitor cleaner only.

Ensure that water does not enter the product and that it is not wet.

Otherwise, this may result in electric shock, fire or a malfunction.

4. Do not force on LCD Screen

Do not tap or scratch LCD Screen with a sharp object.

Otherwise, LCD may get damaged.

5. Product Input/Output Connectors


Do not insert any metal, such as chopsticks, coins, pins and steel of foreign material enters the product .

Otherwise disconnect the adapter cable and contact a Service Center.

6. Do not install 70-CT in an unstable location.

Otherwise, it may fall and cause personal injury and/or damage the product.

2.Connections and Installation

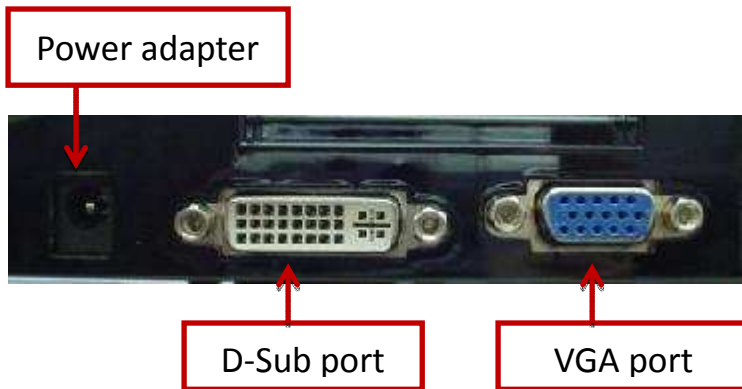

3.Accessories



4.Specifications

LED backlight Life time	10,000 (Min)
Power Supply	DC 12V
Power Consumption	5.3W
Standby power consumption	lower then 3W
Active area	152.4 x 91.5 mm
Response time	11ms
Color	262,144
Contrast	400 : 1
Brightness	350 cd/m2
Viewing angle	70 / 60 degree
Weight:	0.625 kg
Certifications	CE / FCC
Operating temperature	0 ~ 40 c
Storage temperature	-10 ~ 50 c
Operating humidity	20% ~ 80% (non-condensing)
Storage humidity	10% ~ 90% (non-condensing)

5. Troubleshooting

Before calling for assistance, please read below carefully. In case further assistance is needed, please call local service center or contact your dealer.

1. No picture on screen

- a. Check the AC cord and signal cable. Make sure they are properly connected.
- b. Check if the computer has entered energy saving mode.

2. Abnormal display color

Check if the signal cable is properly connected to the computer.

3: How can I clean the outer case/LCD Panel?

Disconnect the VGA/D-Sub cable and then clean the 70-CT with a soft cloth
Do not leave any detergent or scratches on the case. Do not let any water enter the monitor.