
EMC and Safety Standards Applied

Product Name: : DM-D120

Model Name: : M58DD

The following standards are applied only to the customer displays that are so labeled.

North America: : EMI: FCC/ICES-003 Class A

Safety : UL 60950/CSA C22.2 No.60950

Europe: CE marking: EMC

Safety: EN 60950

EN 55022 Class A

EN 55024

IEC 61000-4-2

IEC 61000-4-3

IEC 61000-4-4

IEC 61000-4-5

IEC 61000-4-6

IEC 61000-4-11

Japan : EMI : VCCI Class A

Oceania : EMC : C-Tick Marking: AS/NZS CISPR 22 Class A

WARNING

You are cautioned that changes or modifications not expressly approved by SEIKO EPSON Corporation could void your authority to operate the equipment.

FCC Compliance Statement For American Users

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

FOR CANADIAN USERS

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Safety Precautions

This document uses the two headings shown below to call attention to potential hazards. Failure to observe the information provided under or alongside these headings may lead to injury or heading damage to your equipment. Be sure that you understand the meaning of each heading before you proceed.





**WARNING**

Indicates a potentially lethal hazard. Failure to observe a WARNING may result in severe injury or death.




CAUTION

Failure to observe a CAUTION may result in personal injury, or in damage to equipment or other property.

WARNING

-  *Switch off the power switch immediately if it produces smoke, a strange odor, or unusual noise. Continued use may lead to fire or electric shock. Immediately switch off the power switch and contact your dealer or a SEIKO EPSON service center for advice.*
-  *Never disassemble or modify this product. Tampering with this product may result in injury, fire, or electric shock.*
-  *Do not allow foreign matter to fall into the equipment. Penetration of foreign objects may lead to fire or electric shock.*
-  *If water or other liquid spills into this equipment, immediately power off the main unit and contact your dealer or a SEIKO EPSON service center for advice. Continued usage may lead to fire or electric shock.*

CAUTION

-  *Do not connect cables in ways other than those mentioned in Technical Reference Guide. Different connections may cause equipment damage and burning.*
-  *Do not place heavy objects on top of this product. Never stand or lean on this product. Equipment may fall or collapse, causing breakage and possible injury.*
-  *A stopper limits the horizontal rotation of the display. Do not try to force it to turn beyond the limits of the stopper. Doing so may damage the equipment.*