



PowerScan® RF



Systems Manual

Datalogic Scanning, Inc.

959 Terry Street

Eugene, Oregon 97402

Telephone: (541) 683-5700

Fax: (541) 345-7140

An Unpublished Work - All rights reserved. No part of the contents of this documentation or the procedures described therein may be reproduced or transmitted in any form or by any means without prior written permission of Datalogic Scanning, Inc. or its subsidiaries or affiliates ("Datalogic" or "Datalogic Scanning"). Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation.

Should future revisions of this manual be published, you can acquire printed versions by contacting your Datalogic representative. Electronic versions may either be downloadable from the Datalogic website (www.scanning.datalogic.com) or provided on appropriate media. If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact Datalogic" page.

Disclaimer

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic reserves the right to change any specification at any time without prior notice.

Datalogic is a registered trademark of Datalogic S.p.A. and the Datalogic logo is a trademark of Datalogic S.p.A. all licensed to Datalogic Scanning, Inc. All other trademarks and trade names referred to herein are property of their respective owners.

This product may be covered by one or more of the following patents: 4603262 • 4639606 • 4652750 • 4672215 • 4699447 • 4709369 • 4749879 • 4786798 • 4792666 • 4794240 • 4798943 • 4799164 • 4820911 • 4845349 • 4861972 • 4861973 • 4866257 • 4868836 • 4879456 • 4939355 • 4939356 • 4943127 • 4963719 • 4971176 • 4971177 • 4991692 • 5001406 • 5015831 • 5019697 • 5019698 • 5086879 • 5115120 • 5144118 • 5146463 • 5179270 • 5198649 • 5200597 • 5202784 • 5208449 • 5210397 • 5212371 • 5212372 • 5214270 • 5229590 • 5231293 • 5232185 • 5233169 • 5235168 • 5237161 • 5237162 • 5239165 • 5247161 • 5256864 • 5258604 • 5258699 • 5260554 • 5274219 • 5296689 • 5298728 • 5311000 • 5327451 • 5329103 • 5330370 • 5347113 • 5347121 • 5371361 • 5382783 • 5386105 • 5389917 • 5410108 • 5420410 • 5422472 • 5426507 • 5438187 • 5440110 • 5440111 • 5446271 • 5446749 • 5448050 • 5463211 • 5475206 • 5475207 • 5479011 • 5481098 • 5491328 • 5493108 • 5504350 • 5508505 • 5512740 • 5541397 • 5552593 • 5557095 • 5563402 • 5565668 • 5576531 • 5581707 • 5594231 • 5594441 • 5598070 • 5602376 • 5608201 • 5608399 • 5612529 • 5629510 • 5635699 • 5641958 • 5646391 • 5661435 • 5664231 • 5666045 • 5671374 • 5675138 • 5682028 • 5686716 • 5696370 • 5703347 • 5705802 • 5714750 • 5717194 • 5723852 • 5750976 • 5767502 • 5770847 • 5786581 • 5786585 • 5787103 • 5789732 • 5796222 • 5804809 • 5814803 • 5814804 • 5821721 • 5822343 • 5825009 • 5834708 • 5834750 • 5837983 • 5837988 • 5852286 • 5864129 • 5869827 • 5874722 • 5883370 • 5905249 • 5907147 • 5923023 • 5925868 • 5929421 • 5945670 • 5959284 • 5962838 • 5979769 • 6000619 • 6006991 • 6012639 • 6016135 • 6024284 • 6041374 • 6042012 • 6045044 • 6047889 • 6047894 • 6056198 • 6065676 • 6069696 • 6073849 • 6073851 • 6094288 • 6112993 • 6129279 • 6129282 • 6134039 • 6142376 • 6152368 • 6152372 • 6155488 • 6166375 • 6169614 • 6173894 • 6176429 • 6188500 • 6189784 • 6213397 • 6223986 • 6230975 • 6230976 • 6237852 • 6244510 • 6259545 • 6260763 • 6266175 • 6273336 • 6276605 • 6279829 • 6290134 • 6290135 • 6293467 • 6303927 • 6311895 • 6318634 • 6328216 • 6332576 • 6332577 • 6343741 • 6454168 • 6478224 • 6568598 • 6578765 • 6705527 • 6974084 • 6991169 • 7051940 • AU703547 • D312631 • D313590 • D320011 • D320012 • D323492 • D330707 • D330708 • D349109 • D350127 • D350735 • D351149 • D351150 • D352936 • D352937 • D352938 • D352939 • D358588 • D361565 • D372234 • D374630 • D374869 • D375493 • D376357 • D377345 • D377346 • D377347 • D377348 • D388075 • D446524 • EP0256296 • EP0260155 • EP0260156 • EP0295936 • EP0325469 • EP0349770 • EP0368254 • EP0442215 • EP0498366 • EP0531645 • EP0663643 • EP0698251 • GB2252333 • GB2284086 • GB2301691 • GB2304954 • GB2307093 • GB2308267 • GB2308678 • GB2319103 • GB2333163 • GB2343079 • GB2344486 • GB2345568 • GB2354340 • ISR107546 • ISR118507 • ISR118508 • JP1962823 • JP1971216 • JP2513442 • JP2732459 • JP2829331 • JP2953593 • JP2964278 • MEX185552 • MEX187245 • RE37166 • Other Patents Pending

Table of Contents

Introduction	1
About This Manual	1
References	1
Product Description	2
Laser Cautions	4
Radio Frequency Interference	5
Quick Start Instructions	6
Unpacking and Inspecting the Base Station	6
Installation Procedures	6
Installing the Battery	7
Verifying Scanner Operation	8
Connecting the Base Station to the Host Terminal	8
Linking the Scanner to a Base Station	10
Verifying Scanner-to-Base Station Communications	11
Using the PowerScan RF System	11
Battery Charging and Maintenance	12
Tips for Extending Battery Life	13
Disposing of Batteries	13
Four Station Charger	13
How to Scan	15
Depth of Field	16
Active Symbolologies	20
Enhanced Scanning for Hard-to-Read Bar Codes	20
LED and Beeper Indications	21
Maximizing Signal Range	25
Three-Position Lock	26
Mounting the Base Station	27
Horizontal (Table or Countertop) Mounting	27
Vertical (Wall) Mounting	29
Post or Forklift Mounting	30
RF Programmable Features	31
Programming Overview	32
What Is Programming Mode?	33
The Programming Session	34
Programming Sequence	36
Scanner vs. Base Station Features	38
Return to Factory Settings	39
Interface (I/F) Selection	40
Universal Wedge Terminal Selection	43
Terminal/Keyboard Settings	43
Universal Wedge Number Pad	44
RF Beeper Settings	45
RF When to Beep	46
RF When to Beep Options (continued)	47
Radio Transmit Power	51
RF Channel Selection	52
Transmission Retries Before Message Time-out	54

Wait Time for ACK	57
Wait Time For Scanner Power Shutdown	58
Wait Time Between Retries of Failed Transmission	59
HACK Transmit Options	61
Wait Time For HACK From Host	63
Drop Links on Reset Option.....	64
Drop Oldest Links Option	65
Common Configuration.....	66
Set Maximum Linked Scanners	68
Source-Radio Identification (ID)	70
Low Battery LED Indication	72
Maintenance and Troubleshooting	73
Scanner Maintenance	73
Base Station Maintenance.....	73
Four Station Charger Maintenance	73
Troubleshooting	74
If the Scanner Fails to Link with the Base Station.....	75
Exclusions	77
Limitations of Liability	77
Assignment	77
Risk of Loss	77

Appendix A Sample Bar Codes.....A-1

Appendix B Number Pad.....B-1

Introduction

About This Manual

This systems manual provides information and instructions to connect and configure your PowerScan® RF system. The following sections are included in the manual:

- *Introduction* presents general information about the contents of this manual and about the system.
- *Quick Start Instructions* provide easy to follow procedures for installing your system quickly.
- *Using the PowerScan RF System* provides details about scanning basics, system controls and indicators.
- *Mounting the Base Station* demonstrates ways to securely attach the Base Station to various work surfaces.
- *RF Programmable Features* is a set of procedures detailing system configuration that is unique to the RF system.
- *Maintenance and Troubleshooting* provides solutions for problems that may be encountered during installation and use of the system.
- *Standard Warranty* is a statement describing the warranty policy covering the system.

References


Other manuals are available for this product. Printed copies can be ordered through your distributor. Some manuals can be downloaded at our website address listed on the back cover of this manual. Read the terms of use and instructions at the site to download, save, view or print the most current manual(s) from the internet.

Configurator Express™ On-Screen Programming offers a convenient way to program your scanner using your PC. Information about ordering a kit (includes software, adapter and cable) for your RF scanner can also be accessed from our website (see the back cover of this manual).

Product Description

The PowerScan® RF scanner is designed for durability, with high impact-resistant material and protective rubber cushioning at every point of impact, and it also provides the unleashed freedom of Radio Frequency (RF) communication with your host system. Scanner and Base Station nomenclature and labeling are shown in Figure 1 and Figure 2 below.

Figure 1. Scanner Labels and Nomenclature

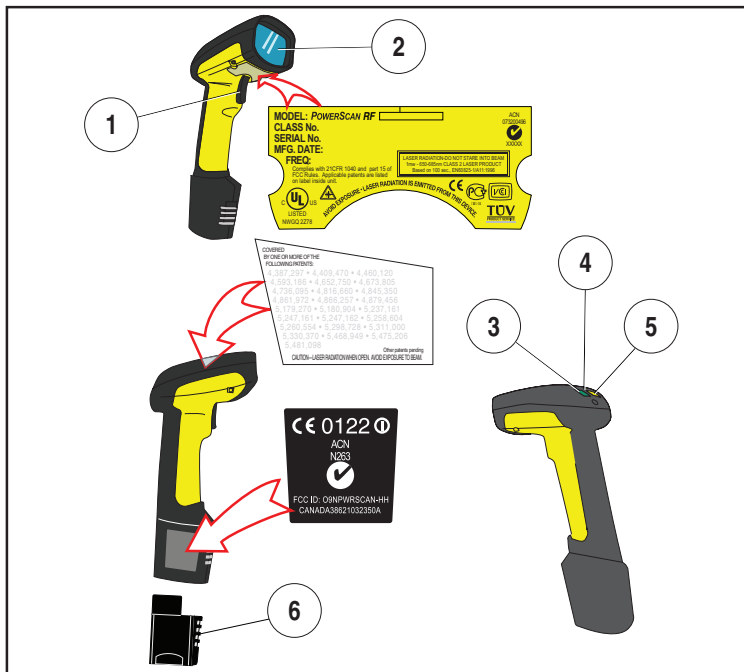


- | | |
|----------------|----------------|
| 1. Trigger | 4. Tether Hook |
| 2. Scan Window | 5. Yellow LED |
| 3. Green LED | 6. Battery |



NOTE

Figure 1 and Figure 2 show label placement ONLY. For actual regulatory, patent and other applicable information, view the labels on the product itself, or call your nearest sales or service representative.

Figure 2. Base Station Labels and Nomenclature

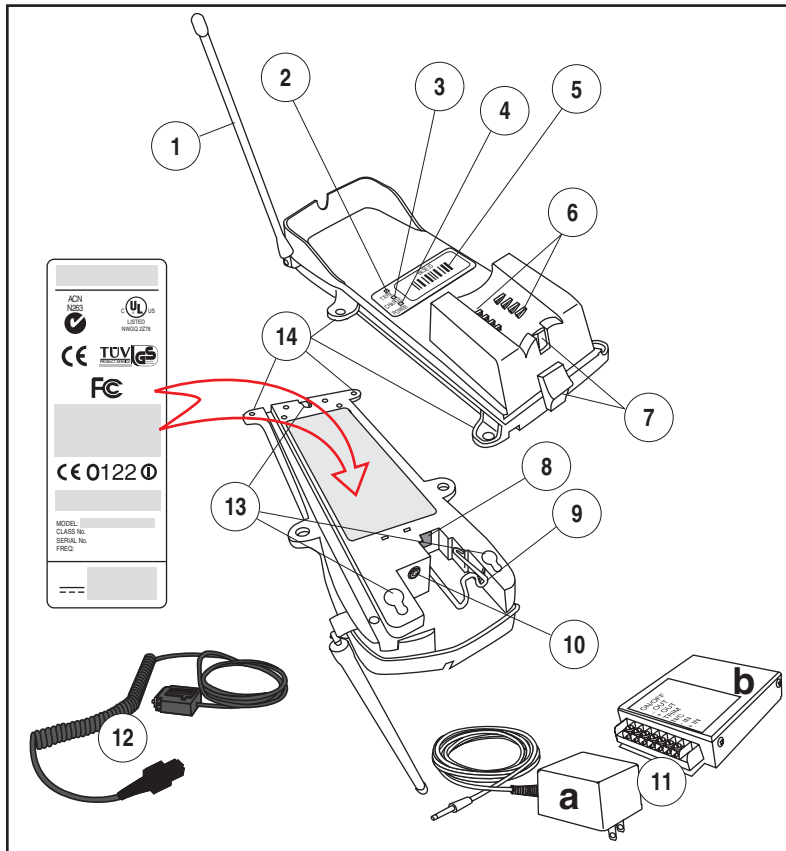

- | | |
|--|--|
| 1. Antenna | 8. Interface (I/F) Connector |
| 2. Transmit/Receive (TX/RX)/ Diagnostics LED | 9. Cable Retainer |
| 3. Charge LED | 10. Power Connector |
| 4. Power LED | 11. Power Supply - (a) AC Adapter or (b) Forklift DC Converter |
| 5. Base ID Bar Code | 12. Interface (I/F) Cable |
| 6. Charging Pins | 13. Mounting Key Slots |
| 7. 3-Position Lock | 14. Mounting Flanges |

Laser Cautions

The PowerScan RF bar code scanner is certified in the U.S. to conform to the requirements of *DHHS/CDRH 21CFR Subchapter J for Class II laser products (SR and LR) and Class IIIa (XLR)*. Class II and IIIa products are not considered to be hazardous. The scanner contains a Visible Laser Diode (VLD) at a wavelength of 650-670 nanometers and is designed so that there can be no human access to harmful levels of laser light during normal operation, user maintenance, or during prescribed service operations.



CAUTION

In the unlikely event that a bright laser spot is experienced rather than a scan line, do not stare into the beam or attempt to repair the unit. Discontinue operation and return the unit to your dealer. Note that when using Marker Beam Mode, a single aiming dot is projected momentarily preceding a scan line and is not considered a malfunction.



CAUTION

Do not open or otherwise service any components in the optics cavity. Opening or servicing any part of the optics cavity by unauthorized personnel may violate laser safety regulations. The optics system is a factory only repair item.



NOTE

The PowerScan® RF scanner is required to be used in conjunction with the Datalogic Base Station, Model: PowerScan RF Base Station.

Radio Frequency Interference

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with these instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Quick Start Instructions

Unpacking and Inspecting the Base Station

After unpacking your new Base Station, check the contents of the shipping carton to ensure all the items you ordered are included:

- PowerScan® Scanner Base Station
- Interface Cable
- Power Supply (AC Adapter or Forklift DC Converter)
- Systems Manual (this manual)
- Programming Guide
- Optional Accessories that you ordered. (The Base Station can be purchased with or without accessory kits.)

If your package contains wrong or missing components, contact your place of purchase. If there are damaged components, immediately file a claim with the carrier. You may want to save your packing material in case you need to ship the scanner at some later time.



NOTE

Other manuals for this product are available on our internet website. See the back cover for our internet address.

Installation Procedures

The basic steps below must be performed to set up the RF scanner. Each of these steps is detailed in this section.

- Installing the Battery
- Verifying Scanner Operation
- *Connecting the Base Station to the Host Terminal*
- Linking the Scanner to a Base Station
- Verifying Scanner-to-Base Station Communications
- Using the PowerScan RF System

Installing the Battery




NOTE

To assure maximum usage, batteries should always be fully charged before their initial use. (See *Battery Charging and Maintenance* on page 12.)

Orient the battery as shown in Figure 3, then push it into the scanner until it snaps in place. To remove the battery, push in on the release tabs on both sides of the battery's base and pull it straight out of the scanner.

Figure 3. Installing the Battery

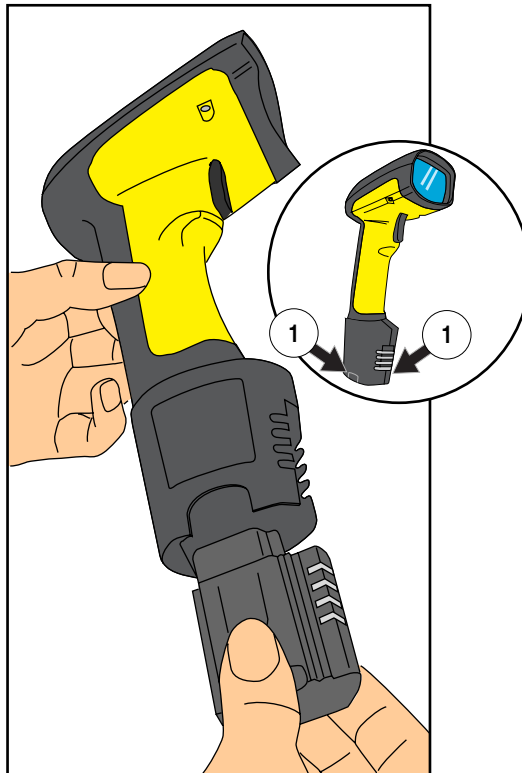

1. Battery Release Tabs

Verifying Scanner Operation

Once a charged battery has been installed in the scanner, scan the sample bar codes in Appendix A that correspond to the symbologies your scanner is programmed to read. If unsure how to do this, see the section on *How to Scan* in this manual. The system may signal with one or a combination of indicators depending upon how the scanner and Base Station are programmed to respond (see *LED and Beeper Indications* for details). If your scanner fails to read a sample bar code of a symbology it's programmed to read, turn to the section titled, *Maintenance and Troubleshooting*.

Connecting the Base Station to the Host Terminal




NOTE

It is important that the interface (I/F) cable be connected to the Base Station prior to applying power to the system. This is because the interface type (RS-232, IBM, Keyboard Wedge, etc.) is selected by the Base Station subject to the I/F cable it is connected to at the time of power-up.

1. Connect the I/F cable to the Base Station (see Figure 4A). The I/F cable is inserted into the connector and the cable retainer clip is rotated over the cable overmold until the retainer snaps in place (see Figure 4B). To disconnect the cable, push in on the retainer (away from the catch on the plastic wall) to release it and enable it to swing upward, allowing the cable to be pulled free (see Figure 4C).

Figure 4. Connecting/Disconnecting the Interface (I/F) Cable

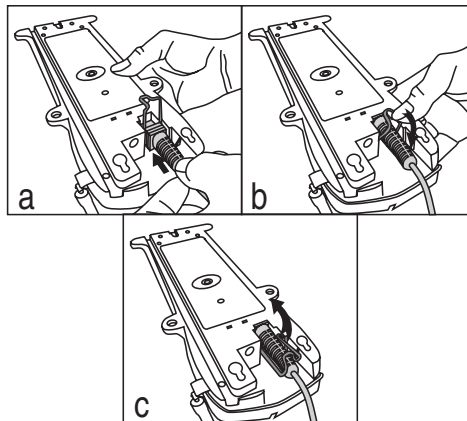

2. Consult your Host Terminal manual to determine the required communication parameters for the Host Terminal (e.g., baud rate, parity, etc.) and, if necessary, modify the programmed parameters to be compatible with those requirements. Scanner and Base Station programming is performed using one of the following:

- Configurator Express™ Programming Software
- PowerScan® Bar Code Scanner Programming Guide



NOTE

See *References* for more information about how to obtain software and manuals for this product.




CAUTION

The Host Terminal manual should also be consulted as to whether power must be turned off before connecting peripheral devices. Ensure that the correct procedure is followed to avoid damage to equipment or interruption of system functions.

3. Connect the I/F cable to the proper port on the Host Terminal (check your Host Terminal manual to determine hardware requirements).
4. Connect the AC Adapter's power cord at the Base Station and plug the AC/DC adapter in at the wall outlet (see Figure 5). The Base Station's POWER LED should be illuminated when the unit is properly connected to power.

Figure 5. Connecting Power to the Base Station

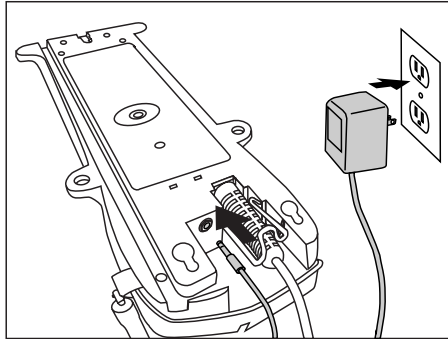

5. Apply power to the Host Terminal.
6. Verify communication with the Host Terminal by aiming the linked scanner at a sample bar code from Appendix A, and pulling the trigger (see *How to Scan* for tips about scanning bar codes). Confirm that the scanner/Base Station sent the data to the host terminal. If not, see the section, *Maintenance and Troubleshooting*. Once all communications are verified, the system is ready for use.

Linking the Scanner to a Base Station

To link a scanner to a Base Station, simply scan the Base Station ID bar code located on the top of the desired Base Station (see Figure 2). As the scanner searches for the Base Station, a short beep is heard as it seeks for the correct channel. When the Base Station responds to the request, the scanner's beeper will either sound a "Link Granted," or "Link Denied" signal (see the section, *LED and Beeper Indications* for more information).

The existing Base Station system configuration can be automatically downloaded to the scanner. This automatic download feature is configurable and can be disabled. See the section, *Common Configuration* for more information about this feature. If downloading occurs, a slight delay with link verification announcement will occur.



CAUTION

Since a new/replacement scanner may have been shipped with a custom configuration or may have been modified with other special programming, it may not be desirable to download a potentially older configuration from an existing Base Station. In this case, reference the *RF Programmable Features* section of this manual, or the *Configurator Express™ On Screen Programming Software* and consider uploading the scanner's newer configuration to the Base Station prior to linking.

Verifying Scanner-to-Base Station Communications

Point the linked scanner at a sample bar code from Appendix A, and pull the trigger (see *How to Scan* for tips on scanning bar codes). Watch the TX/RX (transmit/receive) indicator LED on the Base Station and/or scanner green LED while scanning the bar code. The LEDs should flash momentarily as the two devices communicate. If no communication is indicated, see the section titled, *If the Scanner Fails to Link with the Base Station*.

When the scanner is programmed to do so, communication can also be indicated by a second "acknowledgement" tone¹ that is sounded after a "good read" tone. If a transmission error beep (warble) is heard following a "good read" tone instead of the single acknowledgement tone, communication between the devices may have failed². Refer to the sections *Using the PowerScan RF System*, and *Maintenance and Troubleshooting* for possible remedies, should this occur.

Using the PowerScan RF System

This section covers the following topics:

- Battery Charging and Maintenance
- How to Scan

1. See *LED and Beeper Indications* for more details about beeper signals.
2. Other reasons for a "warble" are that the Base Station may be configured differently than the scanner, or that the system's interface doesn't support the symbology (bar code type) you're trying to scan.

- LED and Beeper Indications
- Maximizing Signal Range
- Three-Position Lock

Battery Charging and Maintenance




NOTE

When the scanner is in use, a low battery condition is indicated by a repeated two-flash signal from the scanner's green LED every time the trigger is pulled before the laser is enabled. This indicator may have been disabled via custom programming. See *LED and Beeper Indications* for more information.

Seat the scanner in the Base Station as shown in Figure 6, ensuring that the battery fully engages the station's metal contacts. The CHARGE LED on the Base Station should flash, indicating the battery is charging.

Figure 6. Charging the Battery

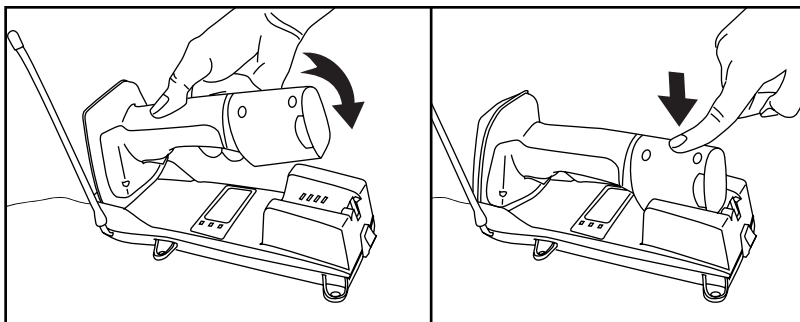

Rapid flashing indicates that charging is taking place. Rapid charging occurs when the battery temperature is between 10°C (50°F) and 46°C (115°F), and/or voltage of the battery is between 2.0 and 3.2V. Charge time is less than 4.2 hours. Rapid charge ends with the battery at approximately 90 to 95% capacity. The CHARGE LED remains on steady when trickle charging or after the charge cycle is complete.



NOTE

A scanner may be charged simultaneously while other scanners are in use with the Base Station.



NOTE

Batteries will not charge if their temperature is below 0°C (30°F). If a battery that is too cold is inserted into the Base Station, the Charge LED will not illuminate.

Tips for Extending Battery Life

Nickel Metal Hydride (NiMH) batteries will better hold a charge if allowed to discharge at least once a week. The chemical reactions that correspond to charge and discharge in a rechargeable battery should occur to obtain the maximum number of charge/discharge cycles in the battery. If a battery is removed from the scanner and stored, it should be fully charged when stored. Batteries will lose the ability to hold a charge when stored for long periods of time (weeks, months, or longer).

Batteries will typically have about 30% charge capacity when shipped. To assure maximum usage, the battery should be fully charged before use.

Store your battery in a cool dry place. Do not leave your battery exposed to direct sunlight or temperatures below 0°C (30°F) and above 38°C (100°F).

Disposing of Batteries

There presently are no US, North America or World disposal requirements for NiMH batteries, so when they won't hold a charge anymore, the batteries can be disposed of, preferably through a recycling center.

Four Station Charger


If you have a Four Station Charger, batteries are inserted for charging as shown in Figure 7. A 90% rapid charge can be achieved in only two hours when using this optional accessory; half the time than when a Base Station is used for charging. The LEDs at each battery station operate the same as the CHARGE LED on the Base Station, with rapid flashing indicating that rapid charging is taking place and on steady during trickle charging or when the rapid charge cycle is finished.



NOTE

If you insert a battery into the Four Station Charger and no LEDs illuminate, the battery may be too cold. Batteries must be at 0°C or higher to charge. Do not attempt to charge cold batteries, since placing them in the charger will curtail the charging of other batteries already present in the unit.

Figure 7. Using the Four Station Charger Accessory

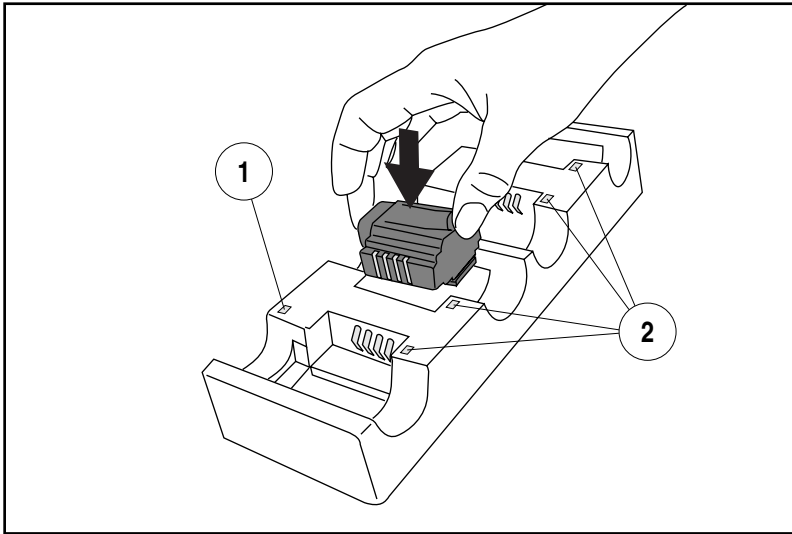

1. Device Power LED


2. Station Charge LEDs

How to Scan

Figure 8 illustrates some tips to help get the best scanning results:

1. The scanner must be pointed at a slight angle to the bar code. Do not hold the scanner perpendicular to the bar code.
2. The laser beam must cross the entire bar code. The scanner cannot correctly read if the the entire bar code is not scanned.

Figure 8. Scanning Tips

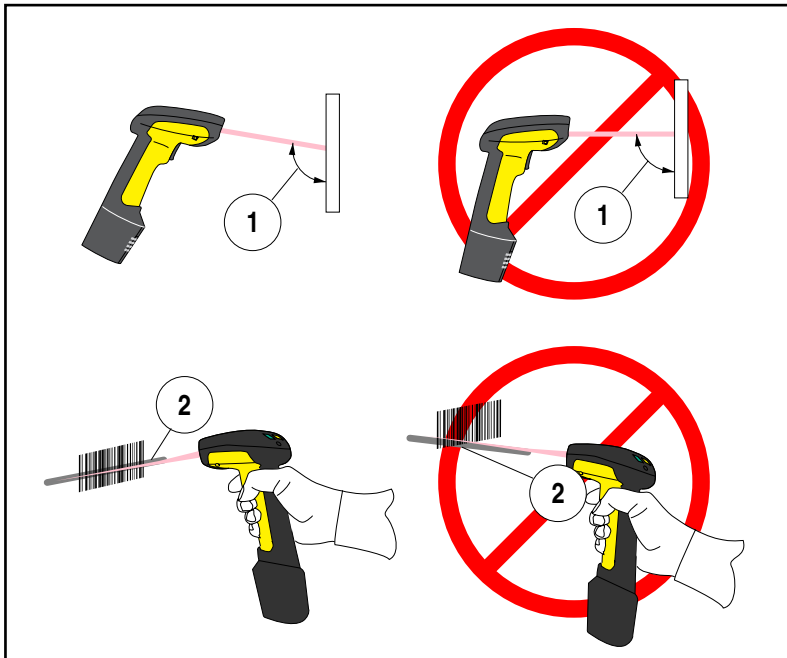


Depth of Field

There are currently four different range models for the RF scanner. Depending upon the model type of your scanner, you'll need to hold the unit at a given distance from the bar code to achieve optimum scanning results. The following diagrams provide depth of field information for each of the models when scanning grade A, Code 39 bar codes: Standard Range (SR), High Density (HD), Long Range (LR) and Extra Long Range (XLR).

Definition of a "mil"

A "mil" is equal to 0.001 inches. In the context of the illustrations in this section, a mil represents the minimum bar code element width. Thus a 5 mil bar code would have a minimum element width of 5 mils (or 0.005 inches).

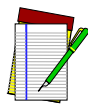


NOTE

Measurements are based on SR models set with the standard 28° scan width (as opposed to the Half Angle setting of 14°). Reference the Programming Manual for more information about the Half Angle feature.

Specifications are subject to change without notice.

Figure 9. Depth of Field (SR)

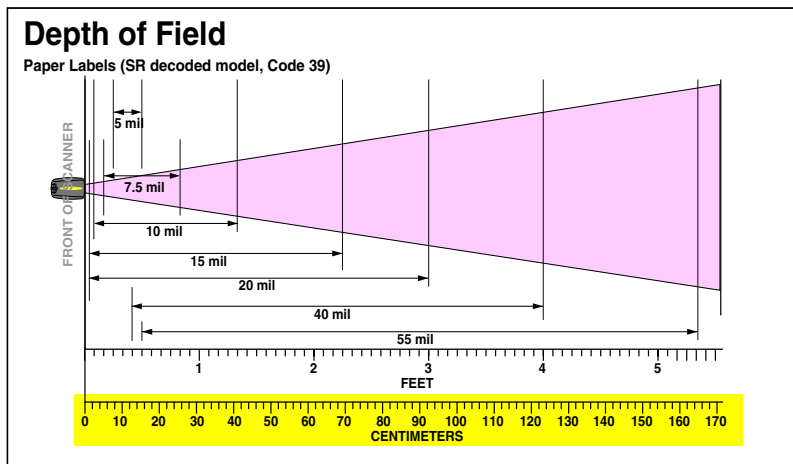




NOTE

See the section titled, *Definition of a "mil"* for more information about reading this chart. Measurements are based on HD models set with the standard 28° scan width (as opposed to the Half Angle setting of 14°). Reference the Programming Manual for more information about the Half Angle feature.

Specifications are subject to change without notice.

Figure 10. Depth of Field (HD)

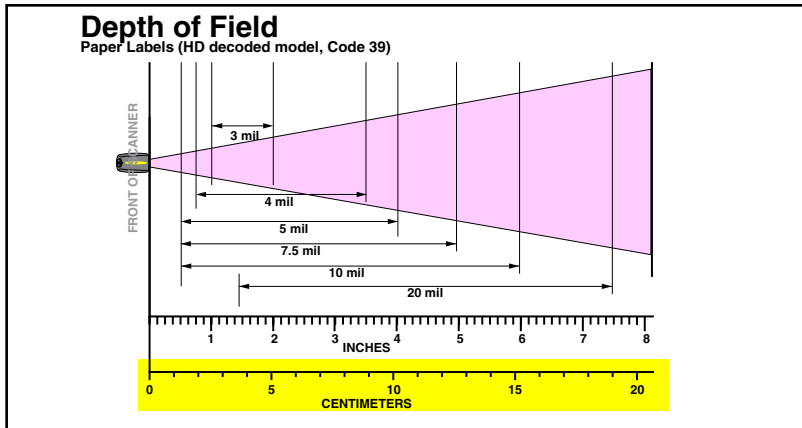




See the section titled, *Definition of a "mil"* for more information about reading this chart. Measurements are based on LR models set with the a 14° scan width (as opposed to the alternate Full Angle setting of 28°). Reference the Programming Manual for more information about the Half Angle feature.

NOTE

Specifications are subject to change without notice.

Figure 11. Depth of Field (LR)

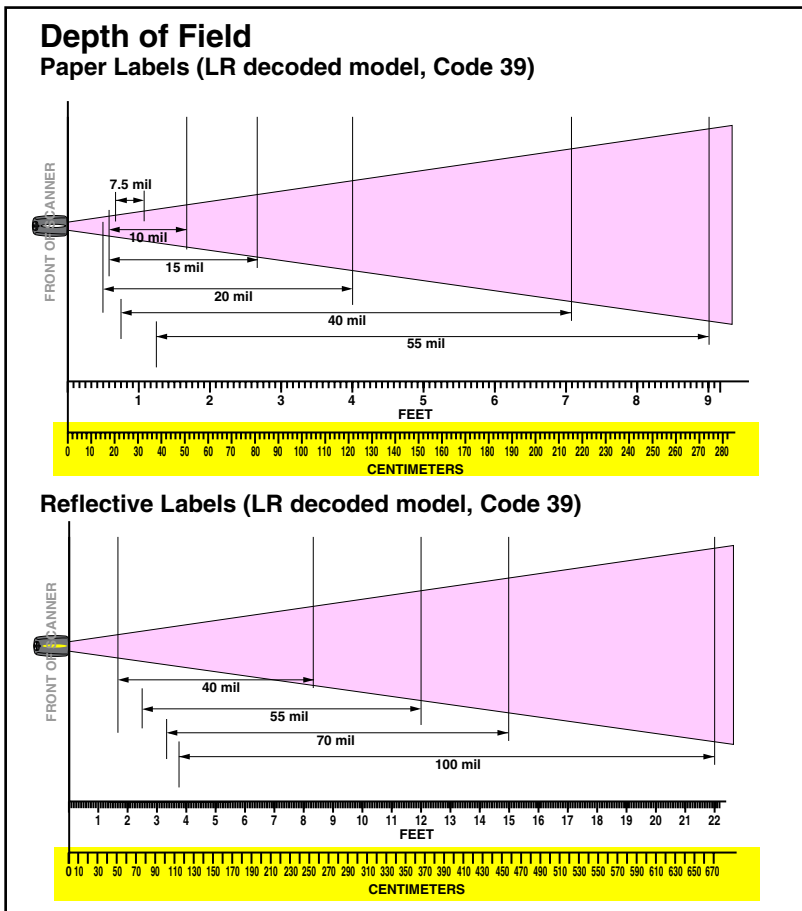



See the section titled, *Definition of a "mil"* for more information about reading this chart. Measurements are based on XLR models set with a 10° scan angle width.


NOTE

Specifications are subject to change without notice.


Figure 12. Depth of Field (XLR)

Depth of Field

Paper Labels (XLR decoded model, Code 39)

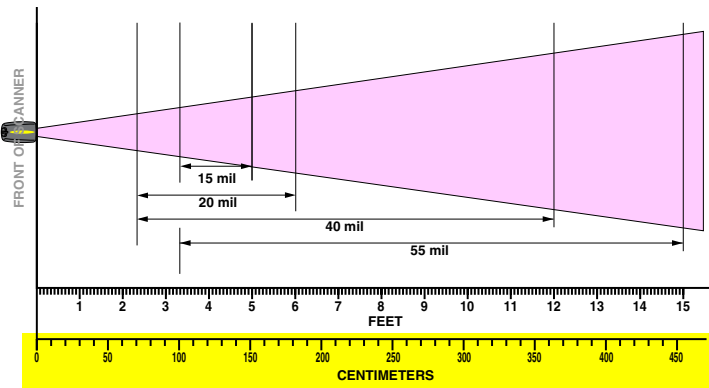

Reflective Labels (XLR decoded model, Code 39)

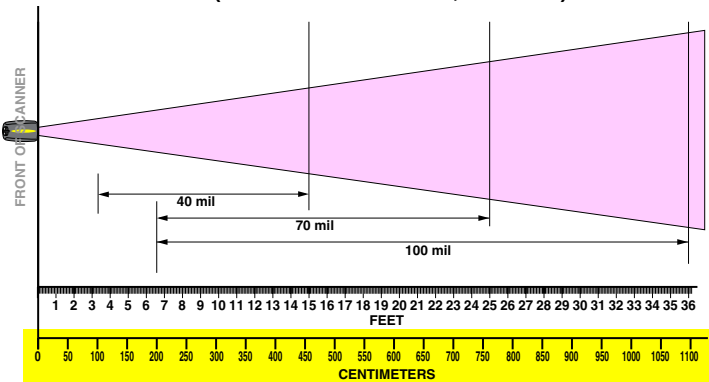

**Active
Symbologies**

The active (enabled) bar code symbologies in the standard factory defaults are:

- Code 39 (C39)
- Code 128 (C128)
- Interleaved 2 of 5 (I 2 of 5)

Your scanner should be pre-programmed with these standard factory default settings, unless...

...it was shipped to you programmed with unique, customer configuration settings.

...you or another user have made changes to scanner programming.

**Enhanced
Scanning for
Hard-to-Read
Bar Codes**

Decoded scanners can be programmed to decode extremely poor quality bar codes by activating advanced Quadralogic™ Decoding. To select this feature, see the Programming Guide.

Scanner programming can also be performed using your PC and the Configurator Express™ On-Screen Programming Kit.

**NOTE**

Information about manuals, kits and programming software for this product are available at our website. See the back cover for our web address.

LED and Beeper Indications

The Base Station LED indicators and the scanner's LEDs and beeper are used to announce system status and perform other useful signals. The tables below list the default function of each of the various indicators.



NOTE

Some LED and beeper indications can be disabled or modified via scanner programming. The tables indicate the default behavior of the indicators, with shaded rows representing features that are programmable.

Table 1. Scanner GREEN LED Functions

LED INDICATION	DURATION	COMMENT
Disable Indication	100ms on, 900 ms off 	Indicates the scanner has been disabled.
Good Read Indication	500 ms on 	Indicates a bar code has been read and decoded.
Program Mode Indication	500 ms on, 500 ms off Continuous flashing 	Indicates the scanner is in Programming Mode.
Field Replaceable Unit (FRU) Indications	Varies. Consists of a long flash followed by multiple short flashes. 	Enables service technicians to identify Field Replaceable Unit (FRU) errors.
Low Battery Indication	Two flashes at 100 ms on, 350 ms off. 	Occurs at trigger pull before the laser is enabled. Indicates the battery is in need of recharging.

Table 2. Scanner YELLOW LED Functions







LED INDICATION	DURATION	COMMENT
Laser on indication	On Steady 	The yellow LED illuminates whenever the laser is on.

Table 3. Scanner BEEPER Functions

SPEAKER INDICATION	DURATION	COMMENT
Scanner Not Currently Linked	Six beeps consisting of 20 ms on, 20 ms off 	Indicates a bar code was read before the scanner was linked to a Base Station.
Good Read Beep	100 ms on (short) 250 ms on (medium)  500 ms on (long) 	Three programmable functions are available. This indicates a bar code has been read and decoded.
Partial Read Bip	20 ms on 	A very short beep ("bip") is sounded when one bar code of a two-bar code pair has been successfully decoded.
Base Station Acknowledgment Beep	100 ms on (short) 250 ms on (medium)  500 ms on (long) 	Indicates a successful bar code transmission to the host (configurable), a successful change of channel, or a successful transmission of a new configuration to the host.











SPEAKER INDICATION	DURATION	COMMENT
Transmission Error Beep	High, then low, then high, then low. 	Indicates unsuccessful transmission to the host.
Link Beep	Low, then medium, then high. 	Indicates a scanner has been successfully linked to a base station.
Unlink Beep	High, then medium, then low. 	Indicates a scanner has been successfully unlinked from a base station.
Field Replaceable Unit (FRU) Indications	Varies. Consists of a long tone followed by multiple short tones. 	Enables service technicians to identify Field Replaceable Unit (FRU) errors.

Table 4. Base Station LED Functions

LED INDICATION	DURATION	COMMENT
TX/RX (Transmit/Receive)	Lit for variable time ^a 	Indicates communications activity to or from the Base Station.
	Continuous rapid flashing at power-up 	Indicates a broken radio.
	Varies. Consists of a long flash followed by multiple short flashes. 	Enables service technicians to identify Field Replaceable Unit (FRU) errors.
Charge (Battery)	Continuous flashing 	When a scanner is nested in the station, this indicates its battery is being quick charged.
	Lit Constantly 	When a scanner is nested in the station, this indicates its battery is at or near full charge.
	Not Lit	A scanner is not present or incorrectly inserted into the station. It can also mean the battery is below 0°C (too cold for charge)
Power	Lit Constantly 	Indicates that power is on.

- a. The LED remains on while the unit is actively processing code which requires a TX/RX to occur. The duration of the LED is dependent upon the length of the message.

Maximizing Signal Range


Here are a few tips about how you can optimize your system installation to allow the scanner greater roving distance from its linked Base Station while maintaining clear communication between the devices.

- Minimize obstructions between the scanner and its Base Station. While the system is capable of communicating through walls, a clean line of sight will always increase the scanner's signal range from the Base Station.
- Never place or install the Base Station in a metal-lined area or enclosure, or near large metal objects.
- Position the Base Station and experiment at various elevations, orientations, etc. to achieve better communications between devices. The system usually works best at heights of one meter or more off the ground. Usually the scanner and Base Station work optimally when operating at about the same height.
- Ensure that programmable features are set to maximize radio transmission. For example, if the feature *Radio Transmit Power* is set to low, set it to high. Selecting a different channel using the options under *RF Channel Selection* might also help. See the section titled, *RF Programmable Features*, for more information about these features.
- Consider using a Four Station Charger accessory to charge batteries as opposed to using the Base Station for this function. It offers faster charging (about half the time to a 90% charge as Base Station charging).

Three-Position Lock

The Base Station is equipped with a three-position lock to allow a scanner to be secured in the Base Station in horizontal, vertical, and forklift installations.

Figure 13. Using the Three-Position Lock

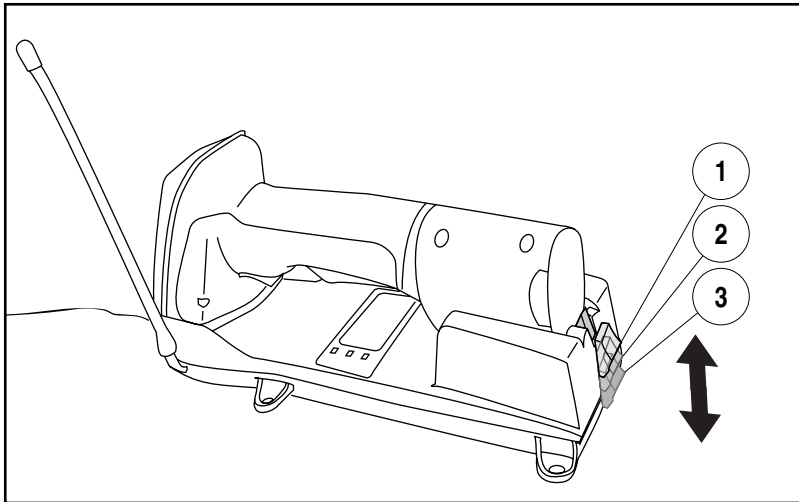

- | | |
|---|---------------------------------|
| 1. Top position:
Vertical Forklift Mount Lock | 3. Bottom position:
Unlocked |
| 2. Middle position:
Vertical (Wall) Mount Lock | |

Mounting the Base Station

The Base Station can be secured to varying surfaces to ensure a permanent, stable installation. Several options are available.


Horizontal (Table or Countertop) Mounting

Using Key Slots

Refer to Figure 14 and follow these steps:

1. Once you have identified the desired area for permanent Base Station installation, use the mounting template included with this manual to mark the position of its "key slot" mounting screws.
2. Install three #8 x 1" (4.1mm x 25.4mm) pan head, self-tapping screws in the marked positions until completely threaded into the mounting surface, then back the screws off two to three full turns.
3. Ensure that power and interface cables are securely connected and routed in the channels provided in the bottom of the Base Station.
4. Align the Base Station key slots (wide end) with the screws, then slide the Base Station to position the screws in the smaller ends of the key slots. Adjust the height of the mounting screws if needed for a secure fit. The Base Station is now secured to the table or countertop.

Figure 14. Mounting Using Key Slots

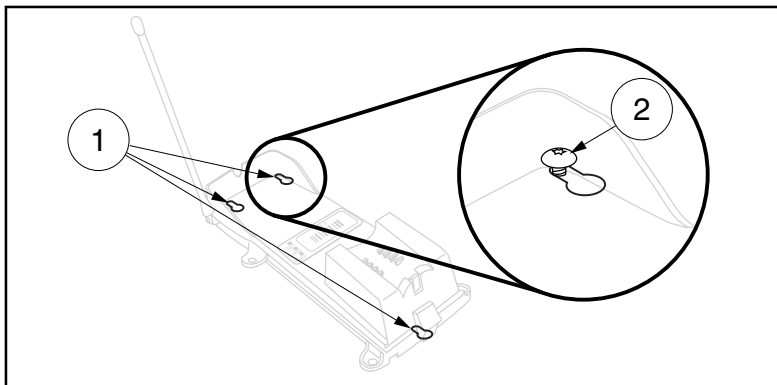

1. Key Slots


2. #8 x 1" (4.1mm x 25.4mm) Pan Head Screw

Using Mounting Flanges

Refer to Figure 15a and follow these steps:

1. Once you have identified the desired area for permanent Base Station installation, hold the unit in place and mark the position of screws using the "mounting flanges."
2. Start and remove four screws (provided) at the marked positions in the mounting surface.
3. Ensure that power and interface cables are securely connected and routed in the channels provided in the bottom of the Base Station.
4. Secure the Base Station to the surface by installing the four screws into the mounting flanges. Base Station attachment is now complete.

Figure 15. Mounting Using Flanges or Two-sided Tape

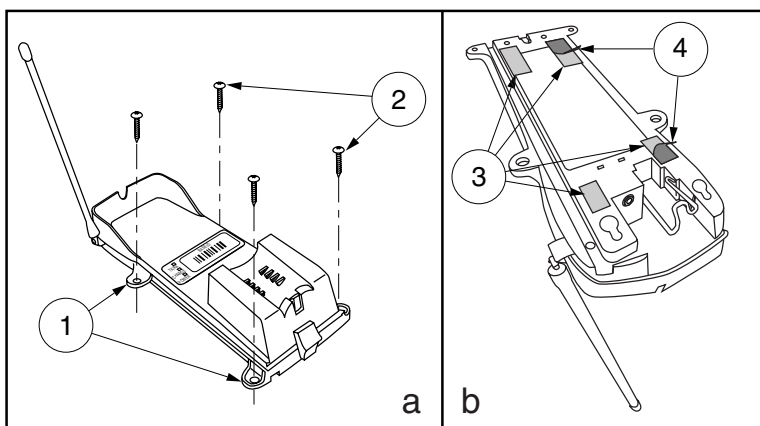

1. Mounting Flanges (4)

3. Two-sided Tape Strips

2. 4 Screws (provided)

4. Backing

Mounting Using Two- Sided Tape

You can also affix the Base Station to a surface using the two-sided tape strips provided with the unit. Simply remove the backing from one side of the strips and apply them to the bottom of the Base Station as shown in Figure 15b. Remove the remaining backing from the tape, then position and firmly press the unit against a smooth, clean surface in the orientation desired.

Vertical (Wall) Mounting

The Base Station can be mounted vertically using the same methods as horizontal mounting (see previous section):

-
- Using Key Slots
 - Using Mounting Flanges
 - Mounting Using Two-Sided Tape ¹


1. Since mounting using this method offers less secure attachment, verify that your tape installation is robust enough for your application.

Post or Forklift Mounting

To secure the Base Station to a post or forklift frame, refer to Figure 16 and follow these steps:

1. Verify that the desired mounting area offers sufficient space for safe forklift operation and will not present a hazard for operators or potentially damage the mounted device(s).
2. Ensure that power and interface cables are securely connected and routed in the channels provided in the back of the Base Station.
3. Using tie-wraps or a similar strapping material, secure the Base Station (through the mounting flanges) to a post or frame. Tighten and adjust as needed to assure a secure installation.

Figure 16. Post or Forklift Mounting

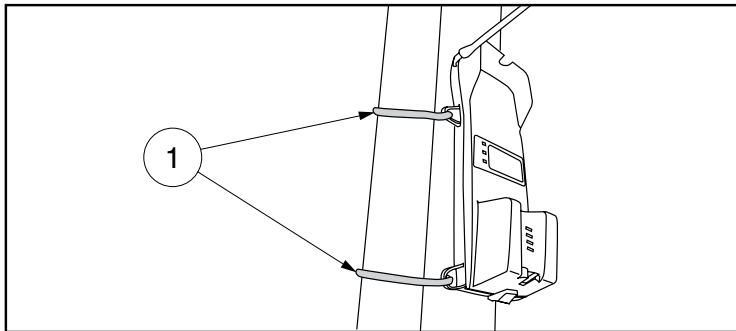

1. Tie Wraps

RF Programmable Features

Use the special programming bar codes contained in this section to set features that are unique to RF models of PowerScan® bar code scanners. To program other features that are common to all models, use one of the following:

- Configurator Express™ On-Screen Programming Kit
- PowerScan® Programming Guide



NOTE

See *References* on page 1 for more information about how to obtain kits, software and manuals for this product.

Programming features included in this manual are:

- Return to Factory Settings
- Interface (I/F) Selection
- RF Beeper Settings
- Radio Transmit Power
- RF Channel Selection
- Transmission Retries Before Message Time-out
- Wait Time for ACK
- Wait Time For Scanner Power Shutdown
- Wait Time Between Retries of Failed Transmission
- HACK Transmit Options
- Wait Time For HACK From Host
- Drop Links on Reset Option
- Drop Oldest Links Option
- Common Configuration
- Set Maximum Linked Scanners
- Source-Radio Identification (ID)
- Low Battery LED Indication

Programming Overview

The RF system's programmable feature settings can be modified to accommodate your unique requirements. Listed below are the various methods to configure scanner and Base Station units:



NOTE

Base Stations and the scanners linked to them must possess compatible configuration files.

Scanner

1. The Base Station's configuration files can be automatically downloaded to the scanner at the time of linking. See the sections, *Linking the Scanner to a Base Station* and *Common Configuration* for more details.
2. The easiest, most comprehensive way to program the scanner is to use the Configurator Express™ On-Screen Programming Kit. See *References* for more information about this product.
3. The scanner can be configured using special programming bar codes like those contained in this section. For the most part, the programming instructions and bar codes on the following pages address this method of scanner configuration.



NOTE

If you program the scanner using any of the methods above, the scanner will store the changes until reprogrammed or returned to factory defaults.

Base Station

Base Station configuration is primarily performed by first programming a scanner with the desired options, then downloading the configuration to the Base Station from that scanner.



CAUTION

Verify that the scanner and Base Station host interface types (RS-232, Keyboard Wedge, etc.) are matched before attempting to download any configuration files or perform any custom programming sessions. Go to Interface (I/F) selection on page x and set the scanner to the Base Station's I/F type.

Use the bar code below to overwrite a Base Station's configuration file.



CAUTION

After the Base Station receives the entire configuration, it will drop all links to scanners other than the scanner transmitting the new configuration. This will require the user to relink all other scanners (see *Linking the Scanner to a Base Station*). Prior to the time of relinking, it is advisable to consider enabling the feature, *Common Configuration*, ensuring that the Base Station will attempt to share the new configuration with scanners as they are linked.

Transmit Scanner
Configuration to Base
Station



What Is Programming Mode?

The scanner must be placed into the Programming Mode state in order to accept programming commands. When programming using the bar code labels in this manual, the scanner is placed in Programming Mode by scanning the "SET" label at the top of most programming feature pages.

While in Programming Mode, the scanner only recognizes special programming bar codes. See the section, *LED and Beeper Indications* for information about scanner indications while in Programming Mode.

The Programming Session

Scanner programming allows you to customize the scanner's configuration to match your specific needs. A typical programming session is conducted as follows:

1. Scan the SET bar code at the top of the page. The scanner will emit one beep, indicating it has read the bar code and the green LED will flash on and off slowly while the scanner remains in Programming Mode. Normal scanning functions are disabled.
2. Scan the programming bar codes(s) to make the desired changes. With few exceptions, the scanner will emit a triple beep each time you scan a valid programming bar code..



NOTE

Not all features are available for all interfaces. The scanner will sound an error tone when scanning programming bar codes for features that cannot be used with the currently active interface. Only features supported by the currently active interface will be implemented.



NOTE

If you are enabling a different interface (I/F), we suggest/recommend that you change the I/F designation first and then proceed with other changes. Once a bar code is scanned that changes the scanner's I/F, all previous I/F configuration items scanned in the programming session are lost.

3. Scan the END label at the bottom of the page to save any new settings and exit Programming Mode. The scanner will sound a beep and reset upon exiting Programming Mode, and the green LED will return to its usual state (on steady or off).

The scanner will not exit Programming Mode unless the END bar code is scanned or the scanner's battery is removed. Removing power during Programming Mode, before scanning the END label, will cause all new settings to be ignored. On power-up, the scanner will return to previous settings.

-
4. **Maintain a record of all changes made** to ensure that you know if the original factory settings have been changed. Use the following table to log your custom configuration changes.

RF Programmable Feature	Factory Default Setting	Your Setting	Comment
RF When to Beep	Option 7		
RF Beeper Volume	Vol 3		
RF Beeper Frequency	High		
RF Beep Duration	100ms		
Radio Transmit Power	High		
RF Channel Selection	Channel 5		
Transmission Retries Before Message Time-out	3 Retries		
Wait Time for ACK	80ms		
Wait Time for Scanner Power Shutdown	10 Seconds		
Wait Time Between Retries of Failed Transmission	90ms		
HACK Transmit Options	HACK upon receipt of scanner transmission		
Wait Time for HACK From Host	1 Second		
Drop Links on Reset Option	Disable		
Drop Oldest Links Option	Enable		

Common Configuration	Disable		
Set Maximum Linked Scanners	8		
Source-Radio Identification (ID)	Don't Include		
Low Battery LED Indication	Enable		












Programming Sequence

To modify a scanner feature (item), the programming bar codes contained in this manual must be scanned in a given sequence depending upon the feature being programmed (as shown in Table 5). There are three possible programming sequences:

- A. Programming sample A (the most commonly used format) demonstrates how three bar codes are scanned in sequence to do the following:
 1. Place the scanner in Programming Mode (SET bar code).
 2. Scan the Item Tag¹ that will enable the new feature.
 3. End the programming session and reset the scanner (END bar code).
- B. Sample B provides an example of a programming feature requiring the entry of a range value. Like sample A, the scanner is placed in Programming Mode and an Item Tag¹ is scanned. Then, a value must be entered before ending the programming session. In the example, three digits must be scanned from the number pad in Appendix B. This type of format, requiring a total of as many as six programming bar codes, is necessary to allow flexible programming with larger item value numeric ranges.
- C. The programming sequence shown in example C requires scanning of a single, extended length bar code. This special programming bar code contains all the data necessary to enter Programming Mode, set the Item Tag¹ and Item Value, and exit Programming Mode (all in one step).

1. An "Item Tag" is a term used to describe an assigned number, which is encoded in a programming bar code, that toggles (selects, enables, disables, etc.) a specific programming feature.

Table 5. Programming Sequence

			
A	<div>1</div> <div>SET</div> <div></div>	<div>2</div> <div>ENABLE NEW FEATURE</div> <div></div>	<div>3</div> <div>END</div> <div></div>
B	<div>1</div> <div>SET</div> <div></div>	<div>2</div> <div>ENABLE NEW FEATURE USING THE FOLLOWING SETTINGS...</div> <div></div>	<div>3</div> <div>0</div> <div></div> <div>0</div> <div></div> <div>8</div> <div></div> <div>4</div> <div>END</div> <div></div> <div>5</div> <div>6</div>
C	<div>1</div> <div>ONE BAR CODE CONTAINS SET + ITEM TAG + ITEM VALUE + END</div> <div></div>		

Scanner vs. Base Station Features

Some programming features are specific to either the scanner (hand-held unit) or the Base Station, while others are applicable to both. Each feature in this manual is marked with an indicator as to which unit(s) it is applicable.



Feature is specific to scanner **ONLY**



Feature is specific to Base Station **ONLY**



Feature is applicable to scanner *and* Base Station.



NOTE

When programming using bar codes via the scanner, it is important to remember that features affecting the Base Station **WILL NOT** be enabled until the new configuration is downloaded to the Base Station using the feature *Transmit Scanner Configuration to Base Station* on page 33.

Return to Factory Settings



Feature is applicable to scanner *and* Base Station.

Scan the bar codes below in sequence to return the scanner to the default settings configured at the factory. This label is typically used to return the RF unit to a “known” operating state when the present programming status is not known, faulty, or suspect.




CAUTION

Use this bar code with caution, since it will reset **ALL** features that may have been programmed for that interface type since the RF unit's installation.

SET -----



**Return to Factory
Setting**

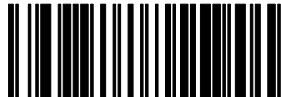

END -----



**Transmit Scanner
Configuration to Base
Station**



If you don't have a record of your site/system's original configuration, you may need to contact your sale representative for assistance to return the unit to normal function. Please be prepared to provide information about the company, location, host terminal system and other pertinent information about the unit being repaired.

Interface (I/F) Selection

It is very important that the scanner and Base Station are each configured to operate with the same interface (I/F) type as the host terminal.



NOTE

The Base Station uses a “smart” cable, which automatically sets the Base Station to the correct I/F upon power-up and connection to the appropriate host.

SET-----



Enable Wand Emulation



Enable Standard
RS-232



Enable Wincor Nixdorf RS-232



Enable IBM Port 5B



Enable IBM Port 9B



Enable IBM Port 17



Enable IBM Port E



Enable Keyboard Wedge
Type A^a



Enable Keyboard Wedge
Type B



Enable Keyboard Wedge
Type C



Enable Keyboard Wedge
Type D



Enable Keyboard Wedge
Type E



Enable Keyboard Wedge
Type F



Enable Keyboard Wedge
Type G



Enable Keyboard Wedge
Type H



Enable Keyboard Wedge
Type I



Enable Keyboard Wedge
Type J



END -----



- a. See Table 6 for the specific interfaces supported by each of the keyboard types listed above. See the following section Universal Wedge Terminal Selection to enable that interface type.

Table 6. Keyboard Wedge I/F Selection

I/F Type	PCs Supported
A	PC/XT w/Alternate Key Encoding
B	AT, PS/2 25-286, 30-286, 50, 50Z, 60, 70, 80, 90 & 95 w/Alternate Key Encoding
C	PS/2 25 and 30 w/Alternate Key Encoding
D	PC/XT w/Standard Key Encoding
E	AT, PS/2 25-286, 30-286, 50, 50Z, 60, 70, 80, 90 & 95 w/Standard Key Encoding
F	PS/2 25 and 30 w/Standard Key Encoding
G	IBM 3xxx w/122 keyboard
H	IBM 3xxx w/102 keyboard
I	PS/55 5530T w/104 keyboard
J	NEC 9801

Universal Wedge Terminal Selection

To activate the Universal Wedge interface, follow these instructions:

1. Scan the START bar code.
2. Determine the I.D. of the terminal/keyboard. Refer to the *Terminal/Keyboard Settings* section below for more information plus a listing of the most common keyboard I.D.s.
3. Scan the *Activate Universal Wedge Interface* bar code.
4. Use the *Universal Wedge Number Pad* to scan in the digits for the keyboard I.D. number you determined in step 2.
5. Scan the END bar code.

START-----



Activate Universal Wedge
Interface



Scan the digit(s) representing the desired keyboard I/F type using the *Universal Wedge Number Pad*, then scan the END bar code.

END -----



Terminal/ Keyboard Settings

The list below contains the most common terminal/keyboard types. If your specific system is not listed below, consult the Universal Keyboard Wedge Connectivity Guide for a detailed listing of terminal/keyboard types. A copy of the guide can be obtained from the internet at the website listed on the back cover of this manual, or call your dealer for customer support information.

Keyboard	Terminal I.D.
High Speed PC/AT, PS2	591
PC AT, PS2	11
MAC	25

**Universal
Wedge Number
Pad**

The default communication mode (factory settings) is Keyboard Wedge of PC AT (keyboard I.D. 11). Use the codes on this page to select the I. D. corresponding to your computer or terminal (reference the Universal Keyboard Wedge Connectivity Guide for this product or call Datalogic Customer Support).

0 →



1 →



2 →



3 →



4 →



5 →



6 →



7 →



8 →



9 →



RF Beeper Settings

The RF version of the scanner exhibits different beeper behavior than standard (non-RF) models. For more information about RF beeper indications, see the section, LED and Beeper Indications.



NOTE

The following descriptions highlight configurable beeper functions that are unique to RF handheld scanners. All other beeper functions supported by the standard version of the scanner are supported by RF models.

Good Read Beep — When good read beep is enabled, this beep sounds at the time the scanner successfully reads a bar code. Selectable settings for the good read beep include:

- RF When to Beep
- Beeper Volume
- Good Read Beep Frequency
- Beep Duration

ACK Beep — The scanner can sound an acknowledgement (ACK) beep to indicate when the Base Station has acknowledged to the scanner that it has received a successful data transmission from the scanner. This beep is also sounded upon a successful channel change sequence or a successful configuration transmission.

Transmission Error Beep — Another selectable indicator beep is the transmission error beep. This beep sounds to indicate an error in transmission between the RF devices.

Link Beep — The handheld scanner will sound a special link beep upon successfully linking with a Base Station. This indication cannot be disabled and is not programmable, other than that it shares the same Beeper Volume setting as other beeper indications set using that feature.

Unlink Beep — When a scanner is successfully unlinked from a Base Station, a unique unlink beep is sounded. This beep is not programmable, and also sounds at the same volume set for Beeper Volume.

RF When to Beep



Feature is specific to scanner ONLY

Several options are available to specify how the RF handheld scanner will beep to indicate a good read. Settings are based on the enable/disable status desired for three selectable beep indications:

- Good Read Beep
- Acknowledgement (ACK) Beep
- Transmission Error Beep

The available options are described and numbered in Table 7 to correspond with the programming bar codes provided for this feature.



NOTE

These settings supersede any settings made using the generic "When to Beep" feature listed in the PowerScan Programming Manual.

Table 7. RF When to Beep Options

#	Good Read Beep	ACK Beep	Transmission Error Beep
0	Disabled	Disabled	Disabled
1	Disabled	Disabled	Enabled
2	Disabled	Enabled	Disabled
3	Disabled	Enabled	Enabled
4	Enabled	Disabled	Disabled
5	Enabled	Disabled	Enabled
6	Enabled	Enabled	Disabled
7	Enabled	Enabled	Enabled

RF When to Beep Options (continued)

SET -----




When to Beep
Option #0



When to Beep
Option #1



When to Beep
Option #2

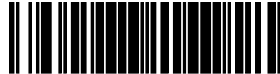

When to Beep
Option #3



When to Beep
Option #4



When to Beep
Option #5



When to Beep
Option #6



When to Beep
Option #7



END -----



**RF Beeper
Volume**



Feature is specific to scanner ONLY

The volume at which the beeper sounds for ACK, transmission error, link, or unlink beeps (but not the good read beep¹) are all affected by this setting. Select volume #1 (25% duty cycle), volume #2 (35% duty cycle), or volume #3 (50% duty cycle).

SET -----



RF Beeper Volume #1



RF Beeper Volume #2



RF Beeper Volume #3



END -----



1. Good read beep volume is selectable via the features available in the PowerScan Programming Manual (P/N R44-1840). See *References* for information about acquiring other manuals.

RF Beeper Frequency



Feature is specific to scanner ONLY

This setting affects the frequency at which the ACK beep is sounded, and is independent of the frequency setting for the good read beep. When the ACK beep is sounded at a different frequency than the good read beep, this can provide a clearer distinction between the tones. Select low frequency (760Hz), medium frequency (1250Hz), or high frequency (2400Hz).

SET -----



RF Beeper Low Frequency



RF Beeper Medium Frequency



RF Beeper High Frequency



END -----



RF Beep Duration



Feature is specific to scanner ONLY

The duration of time that an ACK beep is sounded is selectable using this setting. RF beep duration can be set in increments of 10 ms (tolerance of +/- 10%) from 0 to 2.55 seconds.

SET -----



Set RF Beep Duration



Scan three digits representing the desired duration using the Number Pad in Appendix B, padded with leading zeros (example: 008 = 80ms, 025 = 250ms, 100 = 1 second, etc.), then scan the END bar code.

END -----



Radio Transmit Power



Feature is applicable to scanner *and* Base Station.



NOTE


Remember, programming changes to the Base Station have no effect until the new configuration is downloaded via the feature *Transmit Scanner Configuration to Base Station* on page 33.

The power level at which the radio signal is transmitted between the devices is selectable to be either low or high. This setting allows adjustment to a low setting to minimize potential radio interference caused by communication between the devices, or provides a high setting to increase the signal power which would enable clearer communication over longer distances.


SET -----



Radio Transmit Power = Low

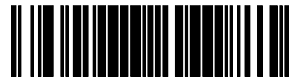

Radio Transmit Power = High

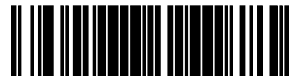

END -----



RF Channel Selection



Feature is applicable to scanner *and* Base Station.



NOTE

Channel selection bar codes are of the type C programming sequence category (see *Programming Sequence* on page 36), and do not require you to scan accompanying SET or END bar codes.

Radio communications between the handheld scanner and its linked Base Station can be carried over one of ten different allowable frequencies (channels). Select alternate channels to improve communications between devices in noisy RF environments.



NOTE

Available channel frequencies will vary according to the country/model of the scanner.


When a new channel is selected, the scanner sends a change-of-channel message to the Base Station. After the Base Station has acknowledged receipt of the message, both the scanner and the Base Station switch their radio channels to the new channel (reference *LED and Beeper Indications* for information regarding scanner and Base Station acknowledgement signals at this point). All further communication is done on the new channel.



NOTE

Any other scanner that happens to be linked to that Base Station will be unable to communicate with the Base Station until it has switched to the new channel. To accomplish this, scan the Base ID label with each scanner you desire to be linked to the Base Station. This action will automatically set each scanner to the correct new channel.

Select Radio Channel
0

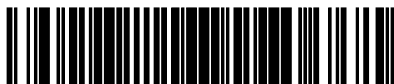

Select Radio Channel
1



Select Radio Channel
2



Select Radio Channel
3



Select Radio Channel
4



Select Radio Channel
5



Select Radio Channel
6



Select Radio Channel
7



Select Radio Channel
8



Select Radio Channel
9



Transmission Retries Before Message Time- out



Feature is applicable to scanner *and* Base Station.



NOTE

Remember, programming changes to the Base Station have no effect until the new configuration is downloaded via the feature *Transmit Scanner Configuration to Base Station* on page 33.

When the scanner attempts to transmit data to the Base Station, communication may not always occur on the first try due to interference, signals from other scanners in the queue, etc.. This setting defines the number of transmission retries the scanner/Base Station will attempt before the message gives up trying to successfully resend/transmit the message (times out). If the specified retry count is exceeded, the scanner will sound a transmission error beep (when transmission error beep is enabled).

In a noisy RF environment, a large number of retries may allow a transmission to get through to the Base Station, but at the cost of increased time-out (should the transmission fail). To maximize battery life, set this feature to the lowest optimal number of retries.

Selectable range for this setting is 0-15 retries.

SET -----



0 Retries



1 Retry



2 Retries



3 Retries (recommended)



4 Retries



5 Retries



6 Retries



7 Retries



8 Retries



9 Retries



10 Retries



11 Retries



12 Retries



13 Retries



14 Retries



15 Retries



END -----



Wait Time for ACK



Feature is applicable to scanner *and* Base Station.



NOTE

Remember, programming changes to the Base Station have no effect until the new configuration is downloaded via the feature *Transmit Scanner Configuration to Base Station* on page 33.

This setting defines a time period allowed once the scanner has sent data to the Base Station for that Base Station to send an acknowledgement (ACK) back to the scanner, signalling receipt of the data. This feature is used to streamline the scanning speed of your system.

The range for this delay is 0.08 - 2.55 seconds in 10ms increments.



NOTE

Selecting longer values for this feature will decrease the battery life between charges.

SET -----



Set Wait Time for ACK



Scan three digits representing the desired delay using the Number Pad in Appendix B. Be sure the number is padded with leading zeros (example: 008 = 80ms, 025 = 250ms, 100 = 1 second, etc.), then scan the END bar code.

END -----




Wait Time For Scanner Power Shutdown



Feature is specific to scanner ONLY

To conserve battery life, the handheld scanner can be automatically shut down when it has not been in use for a given period. A trigger pull or other stimulus will then be required to reactivate the scanner. The idle duration determines how long the scanner stays on/active after each use. Range for this feature is a setting of 1 to 120 seconds in one-second increments. A setting of one second is recommended.

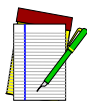

NOTE

Selecting higher values for this feature will effect the length of battery life.

SET -----



Set Wait Time for Scanner
Power Shutdown



Scan three digits representing the desired delay using the Number Pad in Appendix B. Be sure the number is padded with leading zeros (example: 001 = 1 second, 025 = 25 seconds, 100 = 100 seconds, etc.), then scan the END bar code.

END -----



**Wait Time
Between
Retries of
Failed
Transmission**



Feature is applicable to scanner *and* Base Station.



NOTE

Remember, programming changes to the Base Station have no effect until the new configuration is downloaded via the feature *Transmit Scanner Configuration to Base Station* on page 33.

In conjunction with the previous feature, TRANSMISSION RETRIES BEFORE MESSAGE TIME-OUT, this feature defines the duration of time the system must wait before re-trying a transmission of data between the scanner and the Base Station. Consideration for this setting would be to ensure that enough time elapses between tries to avoid encountering the source of the original transmission conflict, while being short enough to avoid causing a substantial increase in the time required to successfully transmit the message.

Wait range can be set from 5ms to 255ms in one-millisecond increments, and is multiplied by the amount of retries selected via the feature, TRANSMISSION RETRIES BEFORE MESSAGE TIME-OUT (TRBMTO) to determine the total duration. For example if this feature (WAIT TIME BETWEEN RETRIES OF FAILED TRANSMISSION) is selected to be 80 ms, and TRBMTO feature is selected to be 3, the resulting total duration between retries would be 80×3 , or 240ms total.

SET -----



Set Wait Time Between Retries
of Failed Transmission



Scan three digits representing the desired delay using the Number Pad in Appendix B. Be sure the number is padded with leading zeros (example: 005 = 5ms, 065 = 65ms, 250 = 250ms, etc.), then scan the END bar code.

END -----



HACK Transmit Options



Feature is applicable to scanner *and* Base Station.



NOTE

Remember, programming changes to the Base Station have no effect until the new configuration is downloaded via the feature *Transmit Scanner Configuration to Base Station* on page 33.

A Host Acknowledgement (HACK) message is a signal sent to the scanner via the Base Station indicating the host has received bar code data previously transmitted by that scanner. This feature determines when the Base Station should send the HACK to the scanner. Choices are:

- Send HACK as soon as the Base Station receives the scanner's transmission. This option is recommended for installations where multiple scanners are linked to one Base Station.
- Send HACK as soon as the Base Station completes transmission to the host. This option is recommended for installations where only a single scanner is linked to one Base Station.
- Send HACK after the host transitions the CTS line from inactive to activate (using CTS scan control). RS-232 ONLY.
- Send HACK after host returns ACK to Base Station. RS-232 with ACK/NAK turned on ONLY.

SET -----



HACK upon receipt of scanner
transmission



HACK upon Base Station
transmission to the host



HACK after host transitions
CTS line (RS-232 ONLY)



HACK after host returns ACK
(RS-232 ONLY)



END -----



Wait Time For HACK From Host



Feature is specific to scanner ONLY

This setting specifies the time the scanner must wait to receive a HACK message back from the host before giving up and registering a transmission error. Selectable range for this wait time is 20ms to 5.1 seconds in 20ms increments. It is recommended that this value be set at no less than one second.



NOTE

Host turnaround (ACK) time is variable. This item (HACK) should be set based on settings for the features *Wait Time for ACK* and *Transmission Retries Before Message Time-out*. For example if ACK is set to one second and retries are set to three, HACK should be set at three seconds.

SET -----



Set Wait Time For HACK



Scan three digits representing the desired delay using the Number Pad in Appendix B. Be sure the number is padded with leading zeros (example: 001 = 20ms, 100 = 2 seconds, 255 = 5.1 seconds, etc.), then scan the END bar code.

END -----



Drop Links on
Reset Option



Feature is specific to Base Station ONLY



NOTE

Remember, programming changes to the Base Station have no effect until the new configuration is downloaded via the feature *Transmit Scanner Configuration to Base Station* on page 33.

When enabled, this option causes the Base Station to drop its links to any and all scanners whenever power is reset/cycled. This provides a simple way to ensure that when reconfiguring a system, scanners do not need to be located and individually unlinked.

SET -----




Drop all links on reset
(ENABLE)



Do not drop all links on reset
(DISABLE)



END -----

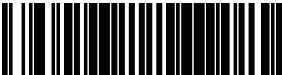

Drop Oldest Links Option



Feature is specific to Base Station ONLY



NOTE

Remember, programming changes to the Base Station have no effect until the new configuration is downloaded via the feature *Transmit Scanner Configuration to Base Station* on page 33.

This feature can be enabled to better manage the linking of new scanners to a multi-point system. Here's how it works: When a new scanner is linked to a Base Station that is already linked to its maximum amount of scanners, an earlier-linked scanner that has been inactive for the longest period of time will be automatically unlinked from the system to make room for the new scanner.

When this feature is disabled, scanners can be linked up to the maximum number set via the programming feature, *Set Maximum Linked Scanners*, or the default maximum, which is eight scanners. Attempts to link additional scanners beyond these limits will fail.


SET -----



Drop oldest links (ENABLE)



Do not drop oldest links
(DISABLE)

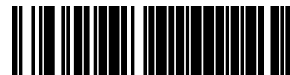


END -----



Common Configuration



Feature is applicable to scanner *and* Base Station.

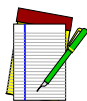

NOTE

Remember, programming changes to the Base Station have no effect until the new configuration is downloaded via the feature *Transmit Scanner Configuration to Base Station* on page 33.

When this option is enabled, the Base Station attempts to share its configuration with a scanner as that scanner links to the Base Station. If, during linking, a scanner's configuration file does not match the Base Station's current settings, the Base Station attempts to transmit to the scanner and overwrite the configuration file with its own.



CAUTION

Since a new/replacement scanner may have been shipped with a custom configuration or may have been modified with other special programming, it may not be desirable to download a potentially older configuration from an existing Base Station. In this case, consider uploading the scanner's newer configuration to the Base Station instead.

If the need is to share the scanner's configuration files to the Base Station, use the Transmit Scanner Configuration to Base Station bar code. *Base Station* on page 33.

SET -----



ENABLE Common
Configuration



DISABLE Common
Configuration



END -----



Set Maximum
Linked
Scanners



Feature is specific to Base Station ONLY



NOTE

Remember, programming changes to the Base Station have no effect until the new configuration is downloaded via the feature *Transmit Scanner Configuration to Base Station* on page 33.

By default, as many as eight scanners can be linked to one Base Station. This feature allows you to further limit allowable linked scanners. Designate a number of scanners that can link from one to eight.

SET -----



Maximum Linked Scanners = 1



Maximum Linked Scanners = 2



Maximum Linked Scanners = 3



Maximum Linked Scanners = 4



Maximum Linked Scanners = 5



Maximum Linked Scanners = 6



Maximum Linked Scanners = 7



Maximum Linked Scanners = 8



END -----



Source-Radio Identification (ID)



Feature is specific to Base Station ONLY



NOTE

Remember, programming changes to the Base Station have no effect until the new configuration is downloaded via the feature *Transmit Scanner Configuration to Base Station* on page 33.

This feature allows you to include source-radio identification¹ (represented by six ASCII bytes) along with bar code data transmitted to the host. Enable this feature to identify the individual scanner sending a given data transmission. Options for this feature are:

- Do not include source-radio ID
- Include source-radio ID as prefix
- Include source-radio ID as suffix




CAUTION

When included as a prefix or suffix, the source-radio ID is displayed immediately adjacent to the bar code data. If an additional prefix or suffix is included (e.g., other global prefix or suffixes are included), any source-radio ID prefix or suffix remains adjacent to (and is considered part of) the bar code data.

1. Each scanner has been pre-configured at the factory with its own unique six-character identification (source-radio ID).

SET -----

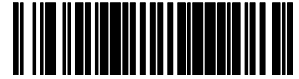

Do not include source-radio ID



Include source-radio as prefix



Include source-radio as suffix



END -----



Low Battery LED Indication



Feature is specific to scanner ONLY

If this feature is enabled and the battery power in the scanner is low, the scanner’s green LED flashes twice every time the trigger is pulled.

SET -----



ENABLE Low Battery LED
Indication



DISABLE Low Battery LED
Indication




END -----



Maintenance and Troubleshooting

Scanner Maintenance The scan window will require occasional cleaning to remove smudges, dust and other debris. To ensure optimal performance, clean the Scan Window using a soft cloth or lens tissue dampened with isopropyl alcohol (or equivalent). See Figure 17. The scanner body can also be cleaned using this method.

Figure 17. Cleaning the Scan Window

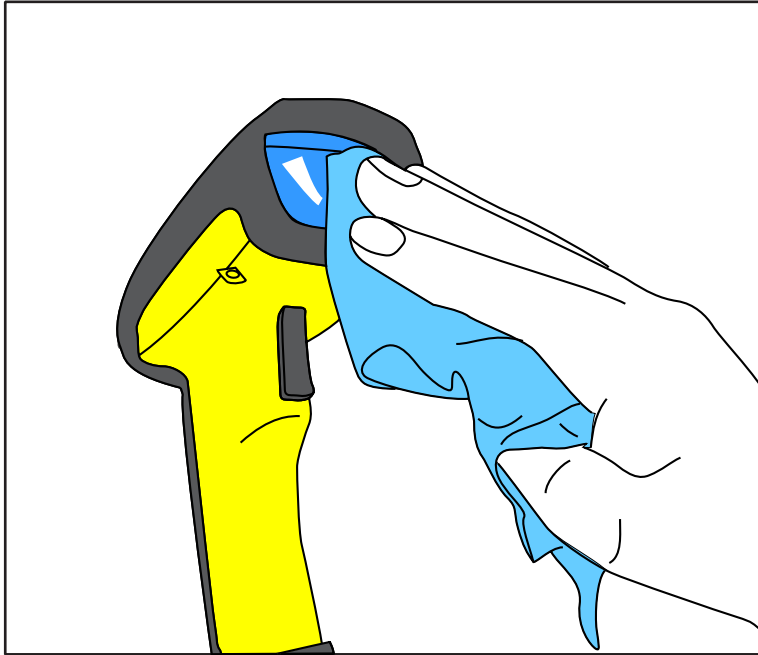

Base Station Maintenance The Base Station requires no routine maintenance. If the antenna becomes damaged, a kit is available for its replacement. Use only Data-logic replacement antenna kits, since use of other antennas can adversely affect performance. Repair or replacement of other items such as charging contact pins, internal components, etc. must be performed by an authorized repair center.

Four Station Charger Maintenance Four Station Charger battery contact replacement kits are available. See the section, *References*, for information about attaining replacement kits.

Troubleshooting

Troubleshoot your RF scanning system by performing the following checks:

For the RF system, ensure that...

- the battery is charged. See *Battery Charging and Maintenance* on page 12.
- the battery is properly installed. See *Installing the Battery* on page 7.
- the scanner is linked to the desired Base Station. See *Linking the Scanner to a Base Station* on page 10.
- the scanner is within reasonable operating range of the Base Station, with no major obstructions between the radio units such as thick walls or heavy machinery. (At the time of this writing, maximum line-of-sight range is specified at 100 feet.)
- there is no local signal interference with other radio-operated equipment. Consult *RF Channel Selection* on page 52 concerning selection of alternate channels.
- the Base Station is powered-on. You can verify the Base Station's AC Adapter by using a known-good AC Adapter.
- the Base Station interface cable is securely attached to the host. Consult your technical support manager or refer to your host system manual to identify the proper cable connection for the scanner. If necessary, verify interface cable function by using a known-good interface cable.

If the problem is specific to scanning, verify that...

- the bar codes you are trying to scan are of satisfactory quality. Bar code label verifiers are available from your dealer if you need precise reporting of label details. Bar codes that are damaged (wrinkled, smudged, or torn) may cause the scanner to read poorly or not at all. If bar code quality seems to be the problem, check to see if the scanner will read a barcode from Appendix A.
- the programmable setting for advanced Quadralogic™ decoding is set optimally for your system. (See *Enhanced Scanning for Hard-to-Read Bar Codes* on page 20.)

If the Scanner Fails to Link with the Base Station

Here are reasons why your scanner may not be linked with the Base Station:

- There may be too many scanners attempting a link with the same Base Station. A maximum of eight scanners may link with one Base Station at a given time. Reference the section, *Set Maximum Linked Scanners* for more information..



CAUTION

The limit imposed for linked scanners is selectable to either: 1) disallow any new, additional scanner to be linked beyond the set limit (this is the default), or 2) drop the link with the scanner *least* recently used. Be aware that in linking additional scanners to a single Base Station, you may inadvertently unlink another scanner from the Base Station.

- Links may be dropped by the Base Station if it has been reset (power cycled). It may be necessary to relink all scanners upon system reset. See also, *Drop Links on Reset Option*.

NOTES

Standard Warranty

Datalogic warrants to Customer that Datalogic's products will be free from defects in materials and workmanship for a period of two years from product shipment.

In order to obtain service under this Warranty, Customer must notify Datalogic of the claimed defect before the expiration of the Warranty period and obtain from Datalogic a return authorization number for return of the product to designated Datalogic service center. If Datalogic determines Customer's claim is valid, Datalogic will repair or replace product without additional charge for parts and labor. Customer shall be responsible for packaging and shipping the product to the designated Datalogic service center, with shipping charges prepaid. Datalogic shall pay for the return of the product to Customer if the shipment is to a location within the country in which the Datalogic service center is located. Customer shall be responsible for paying all shipping charges, duties, taxes, and any other charges for products returned to any other locations.

Warranty is subject to the limitations and exclusions set forth below. Warranty set forth above is in lieu of any other warranties, expressed or implied, including merchantability and fitness.

Exclusions

Warranty coverage shall not apply to any claimed defect, failure or damage which Datalogic determines was caused by: improper use of product; failure to provide product maintenance, including but not limited to cleaning of the scan windows in accordance with product manual; installation or service of product by other than Datalogic representatives; use of product with any other instrument, equipment or apparatus; modification or alteration of product. External cables and replacement of scan windows due to scratching, stains or other degradation will not be covered under the Warranty. Products returned for service must be accompanied by the original external power supplies for performance of service.

Limitations of Liability

Datalogic repair or replacement of defective product as set forth above is the customer's sole and exclusive remedy on account of claims of breach of warranty or product defect. Under no circumstances will Datalogic be liable to customer or any third party for any lost profits, or any incidental, consequential indirect, special or contingent damages regardless of whether Datalogic had advance notice of the possibility of such damages.

Assignment

Customer may not assign or otherwise transfer its rights or obligations under Warranty except to a purchaser or transferee of product. No attempted assignment or transfer in violation of this provision shall be valid or binding upon Datalogic.

Risk of Loss

Customer shall bear risk of loss or damage for product in transit to Datalogic. Datalogic shall assume risk of loss or damage for product in Datalogic's possession or product being returned to Customer by Datalogic, except such loss or damage as may be caused by the negligence of Customer, its agents or employees. In the absence of specific written instructions for the return of product to Customer, Datalogic will select the carrier, but Datalogic shall not thereby assume any liability in connection with the return shipment.

NOTES

Appendix A

Sample Bar Codes

Use these test bar codes to check the scanner's ability to read the various symbologies represented.

Code 128



Code 39



Interleaved 2 of 5



Standard 2 of 5



Codabar



Code 93



MSI/Plessey



UPC-A



UPC-A with 2 digit Add-on



UPC-A with 5 digit Add-on



UPC-E



EAN-8



EAN-13




Appendix B

Number Pad

0 →



1 →

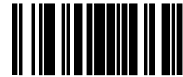

2 →



3 →



4 →




5 →



6 →



7 →

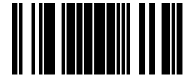

8 →



9 →



NOTES

DECLARATION OF CONFORMITY



Datalogic hereby declares that the Equipment specified below has been tested and found compliant to the following Directives and Standards:

Directives: EMC 89/336/EEC
Low Voltage 73/23/EEC
R&TTE 1999/5/EC

Standards: EN 300 683:1997 - Radio
EN 300 220-3:2000 - Radio Immunity
EN 60950:2000 - ITE Safety
EN 60825-1/A2:2001 - Laser Safety

Equipment Type: Barcode Scanning Equipment

Product Model Name: PowerScan RF Handheld Scanner and Base Station

Placed into EU Service: April 2007 under the Datalogic trademark. Jan. 2001 under the PSC trademark.

Serial No. Sequence: Handheld = Rxxxxxx Base Station = BSxxxxxx

Responsible Manufacturer: Datalogic Scanning, Inc. 959 Terry St. Eugene, OR USA

Declaration of Conformity with Regard to the R&TTE Directive 1999/5/EC

English: This equipment is in compliance with the essential requirements & other relevant provisions of Directive 1999/5/EC.
Nederlands: Deze apparatuur voldoet aan de essentiële vereisten en andere relevante voorzieningen van EU-richtlijn 1999/5/EC.
Suomalainen: Tämä laite noudattaa direktiivin 1999/5/EC keskeisiä vaatimuksia ja sen muita olennaisia määräyksiä.
Français: Cet équipement répond aux exigences et provisions de la Directive 1999/5/EC.
Deutsch: Diese Geräte entsprechen den Anforderungen und anderen relevanten Bestimmungen der Richtlinie 1999/5/EC.
Italiano: Questa apparecchiatura rispetta i requisiti essenziali e le altre clausole rilevanti della Direttiva 1999/5/CE.
Dansk: Dette udstyret er i samsvar med de grunnleggende kravene og andre relevante forskrifter i 1999/5/EC-direktivet.
Português: Este equipamento está de acordo com os requisitos essenciais e outras provisões relevantes da Diretiva 1999/5/EC.
Español: Este equipo cumple con los requisitos esenciales y otras provisiones relevantes de la Directiva 1999/5/EC.
Svenska: Denna utrustning uppfyller de väsentliga kraven och andra relevanta förordningar i Direktiv 1999/5/EC.
Norsk: Dette utstyret er i samsvar med de grunnleggende krav og andre relevante bestemmelser i EU-direktiv 1999/5/EF
Isienska: Þetta tæki er samkvæmt grunnkröfum og öðrum viðeigandi ákvaðum Tilskipunar 1999/5/CE.



Australia

Datalogic Scanning Pty Ltd
North Ryde, Australia
Telephone: [61] (2) 9870 3200
Fax: [61] (2) 9878 8688

France and Benelux

Datalogic Scanning Sarl
LES ULIS Cedex, France
Telephone: [33].01.64.86.71.00
Fax: [33].01.64 46.72.44

Germany

Datalogic Scanning GmbH
Darmstadt, Germany
Telephone: 49 (0) 61 51/93 58-0
Fax: 49 (0) 61 51/93 58 58

Italy

Datalogic Scanning SpA
Vimercate (MI), Italy
Telephone: [39] (0) 39/62903.1
Fax: [39] (0) 39/6859496

Japan

Datalogic Scanning KK
Shinagawa, Tokyo, Japan
Telephone: 81 (0)3 3491 6761
Fax: 81 (0)3 3491 6656

Latin America

Datalogic Scanning, Inc
Miami, Florida, USA
Telephone: (305) 591-3222
Fax: (305) 591-3007

Spain and Portugal

Datalogic Scanning Sarl Sucursal en España
Madrid, Spain
Telephone: 34 91 746 28 60
Fax: 34 91 742 35 33

United Kingdom

Datalogic Scanning LTD
Watford, England
Telephone: 44 (0) 1923 809500
Fax: 44 (0) 1923 809 505



www.scanning.datalogic.com

Datalogic Scanning, Inc.

959 Terry Street
Eugene, OR 97402
Telephone: (541) 683-5700
Fax: (541) 345-7140

