

Installing a camera on a Windows Colormetrics C1000 mPos

In order to install a camera app on the C1000 mPos Windows OS please follow the steps below:

Step 1

Enable the camera in BIOS Setup.


Step 2

Open the "Camera" folder.




Step 3

Under Windows Batch File click "Install".

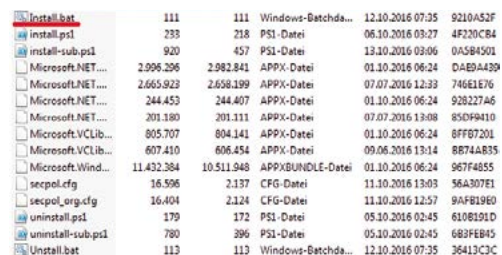

Step 4

Open "Computer Management", then go to "Services and Applications" and finally "Services".

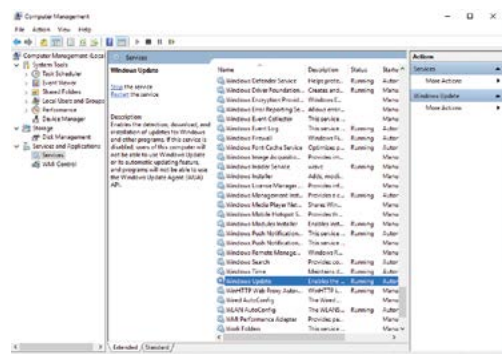

Step 5

Scroll down and click "Windows Update".

Step 6

Select "Startup type: Automatic", then click "Apply".

Step 7

Restart the tablet. You are now able to use the camera app.

